




Uniden TCX905 Home Button Replacement

This guide will show the user how to replace the plastic home button in the center of the front face.

Written By: Gary Pence

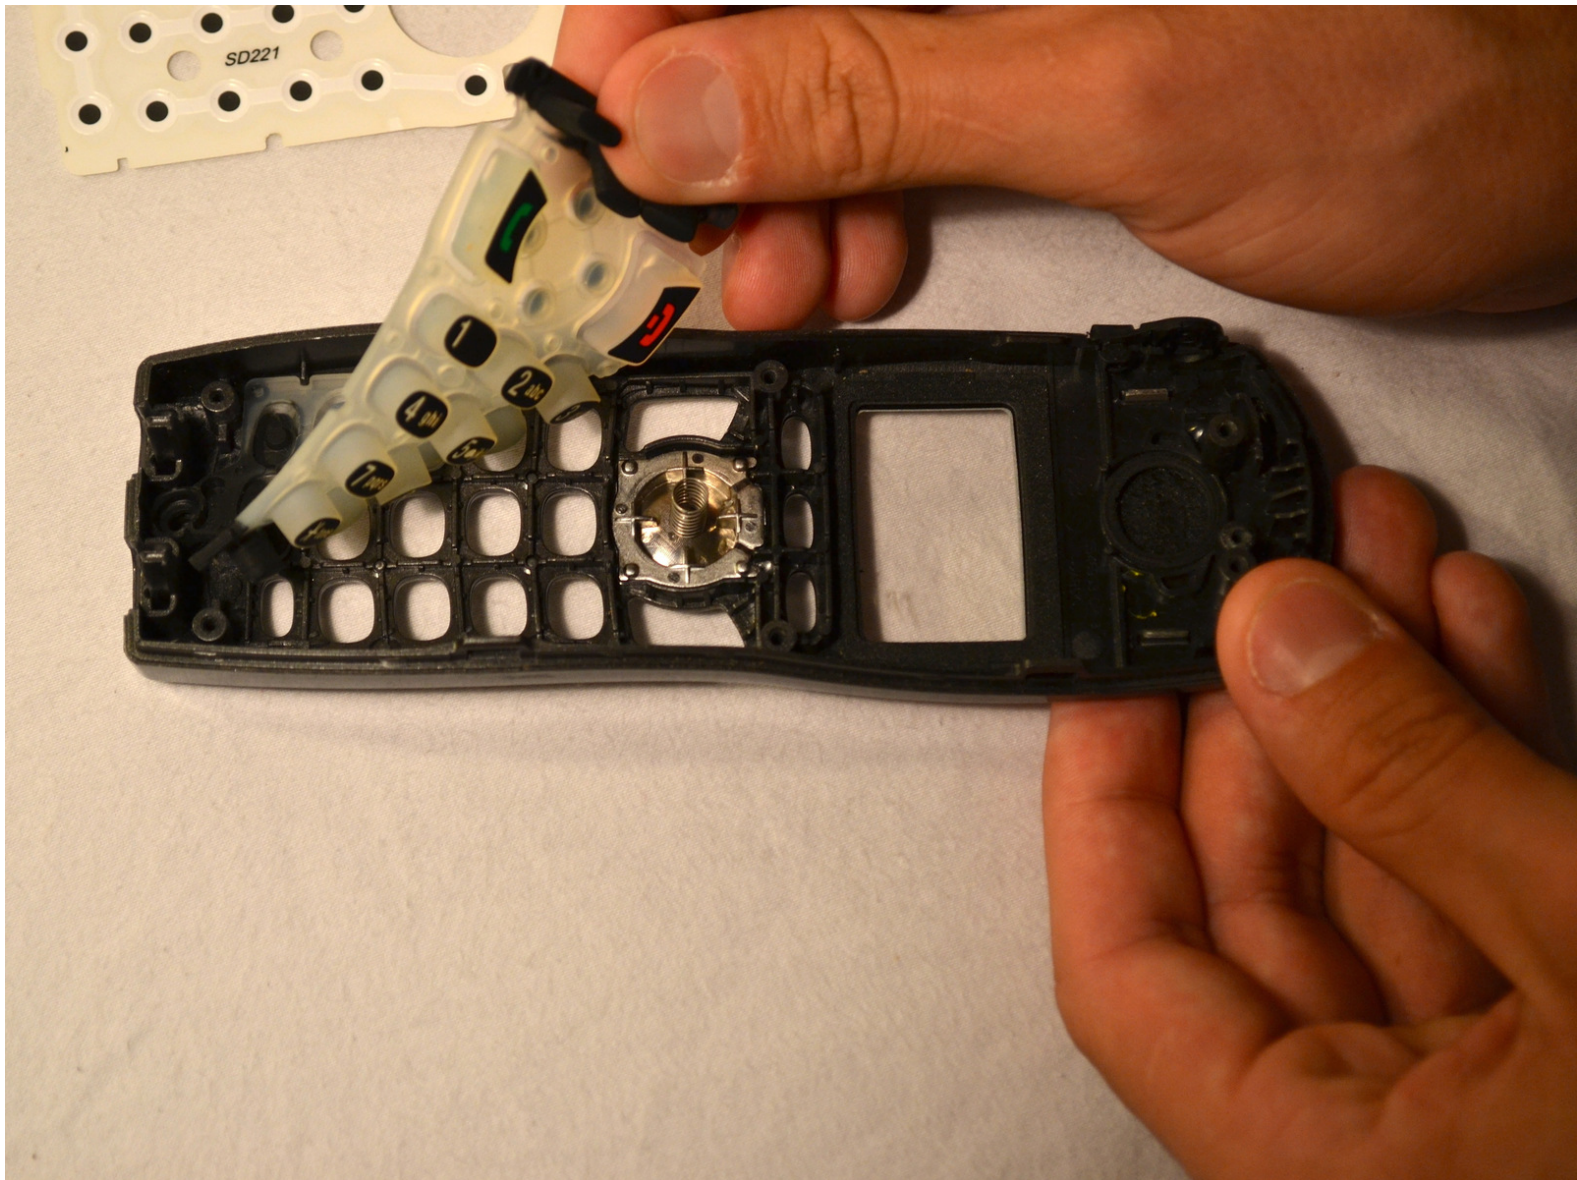

INTRODUCTION

The home button is located in the center of the front side of the phone, just underneath the screen.



TOOLS:

- [Phillips #1 Screwdriver](#) (1)



PARTS:



- [Uniden TCX905 Home Button](#) (1)
- [Spring \(if necessary\)](#) (1)

Step 1 — Battery Cover



- Starting from the top of the cover, slide down and away from the phone with your thumb
- Lift battery cover off of batter and place it to the side

Step 2 — Battery Pack

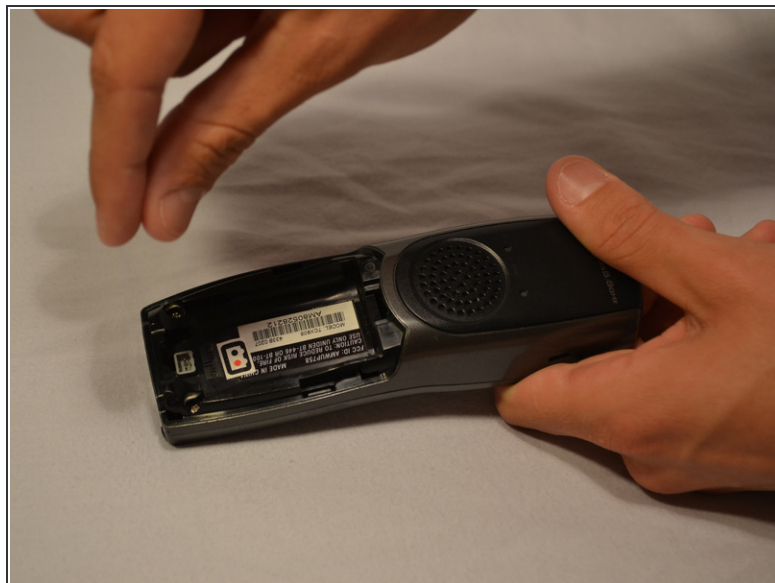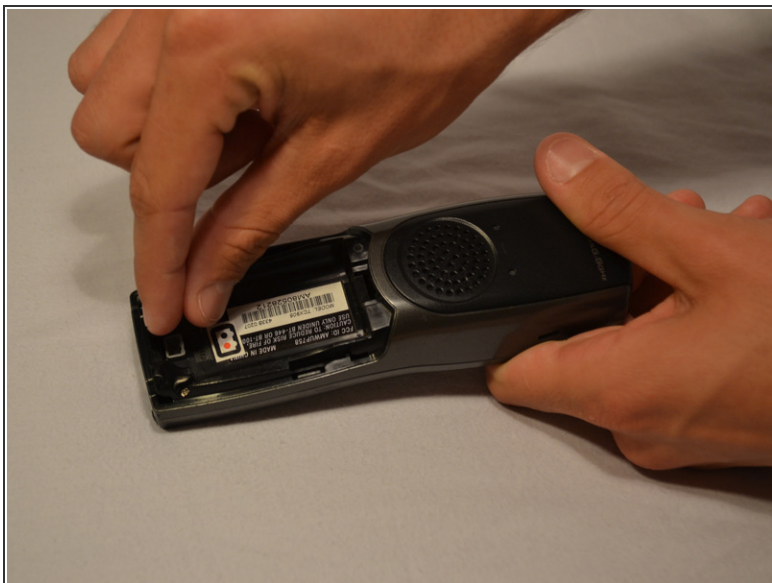




- Once battery cover is removed, place your thumb and index fingers on the the wires near the receptacle
- Gently pull straight up on the wires until a click is heard which signifies the battery is completely disconnected
- Place battery pack to the side

Step 3 — Back Shell






- Remove the two 11mm screws inside the battery storage compartment using Phillips #1 screwdriver (located near the very bottom of the phone)

Step 4

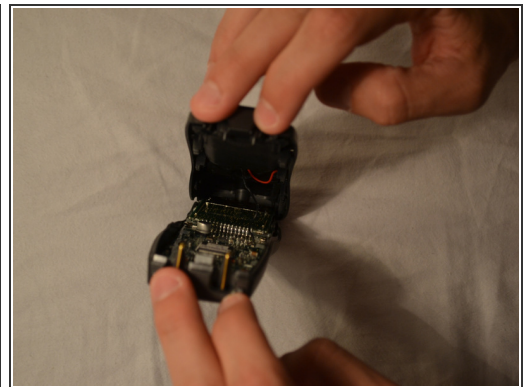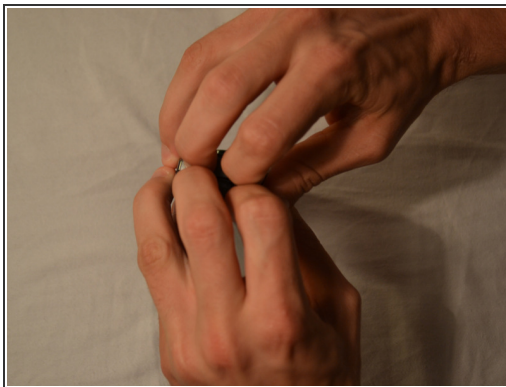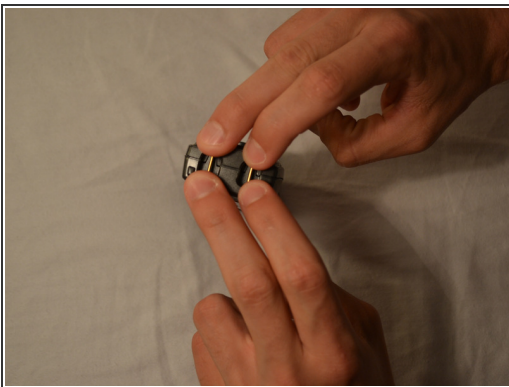



- Gently open phone casing along the seam at the bottom of the phone using index and middle fingers of both hands

Step 5

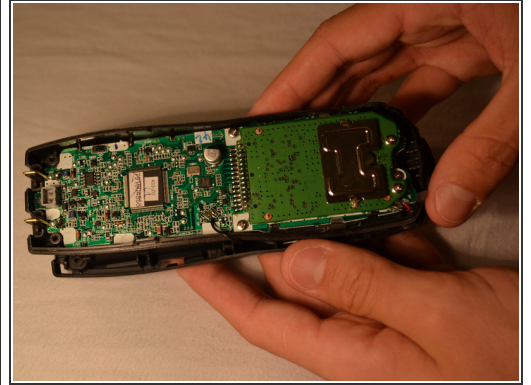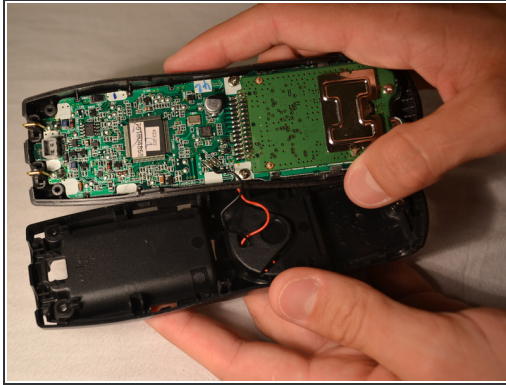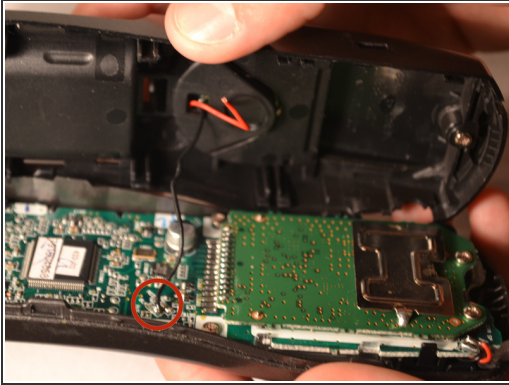


- Ensure that wired connection between circuit board and back shell is not strained
- Fold the back shell underneath the front shell and circuit board

Step 6 — Circuit Board

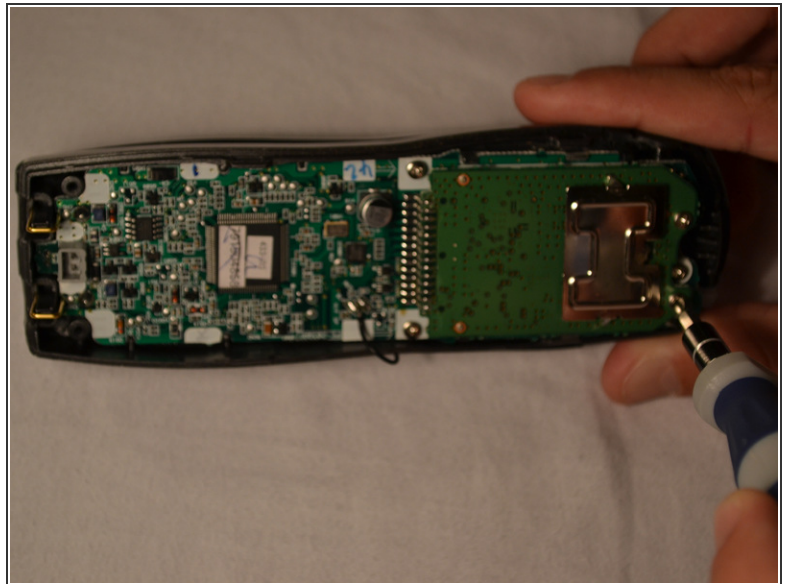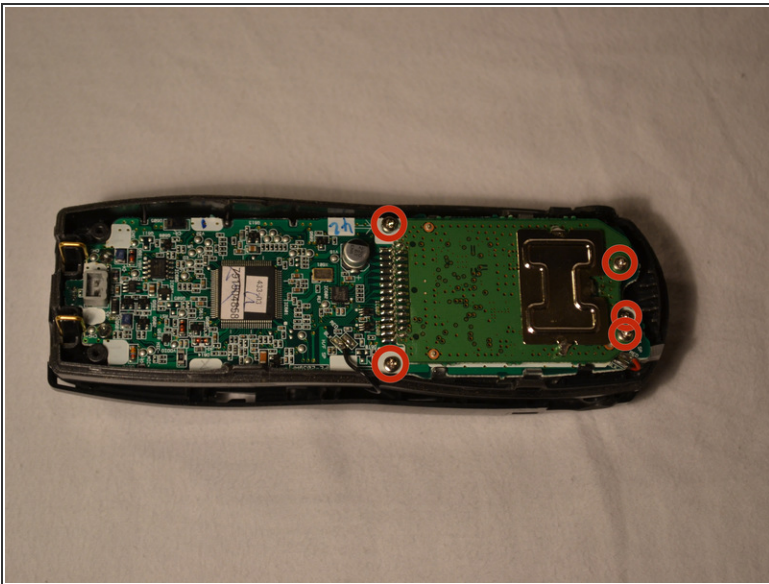


- Carefully remove the middle two 7mm screws, the outer top 9mm screws, and the top middle 7 mm screw that hold the logic board to the front shell of the phone casing using the Phillips #1 screwdriver

Step 7

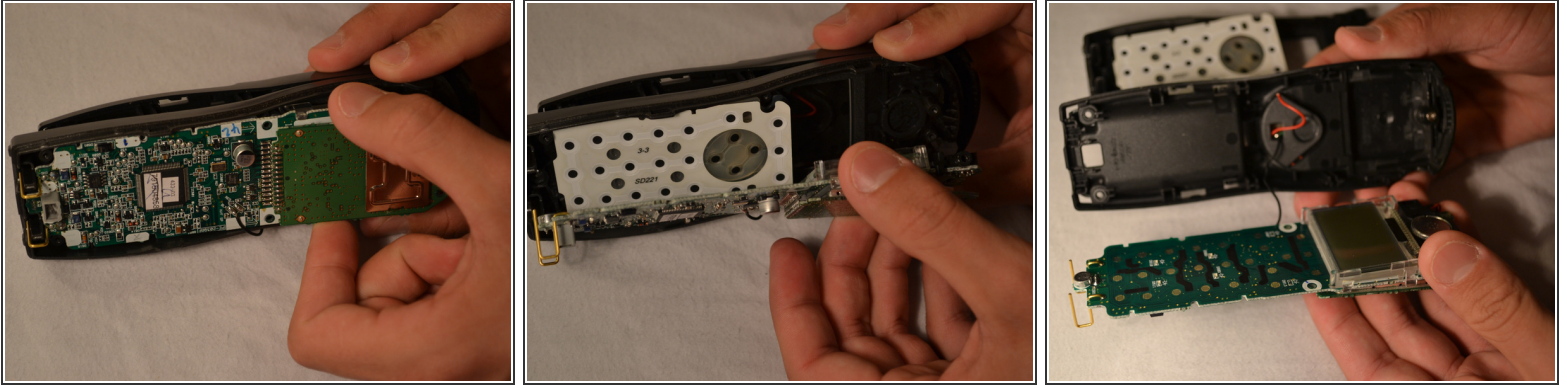



- Using index finger and thumb, carefully remove the circuit board from the front shell of phone

Step 8 — Home Button

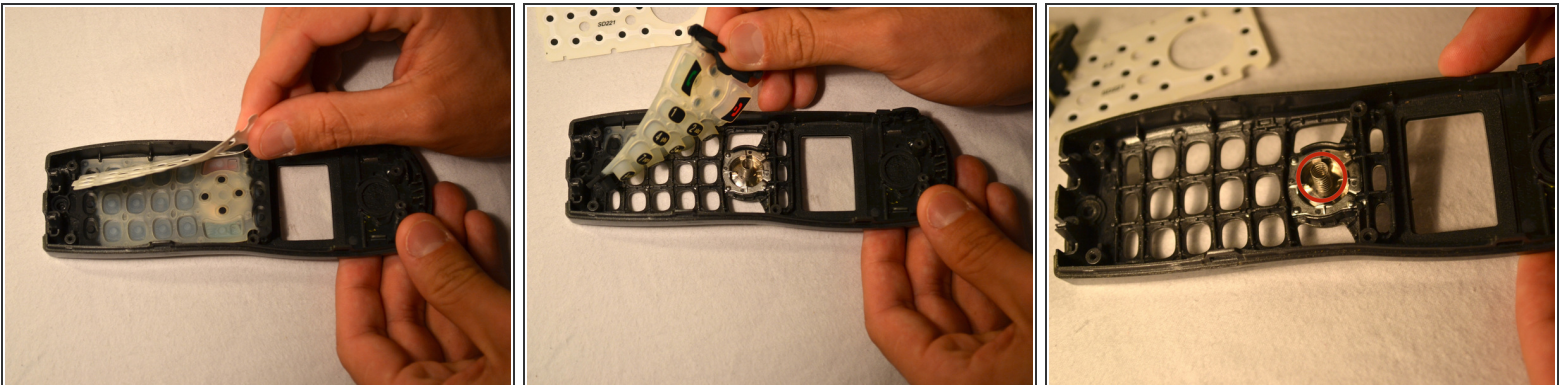

- Remove the white plastic sheet covering the silicon button pad
 - Remove the silicon button pad to access the home button and spring
- i** Note: Be mindful that the spring is small and sensitive and can be lost easily if not cautious

Step 9

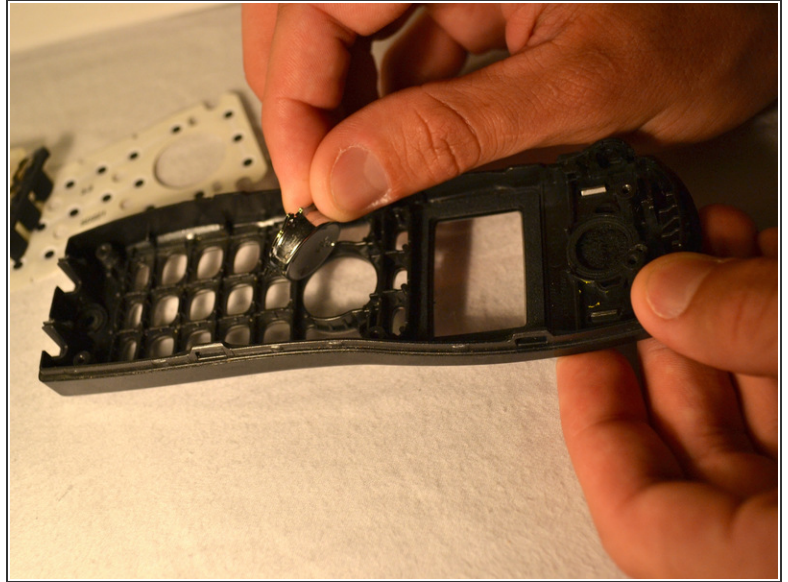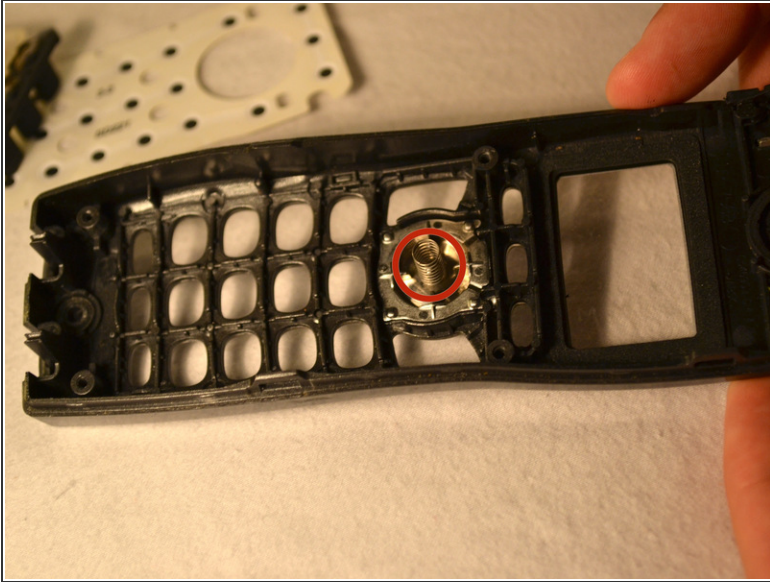

- Once the silicon button pad is removed, remove the spring from home button
- Finally, remove the home button from its setting in the front shell of the phone

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-20 08:35:13 AM.